

dormakaba Group

W Turnstile Installation Instructions

PRECAUTIONS Read this maual in its entirety before installing turnstiles. If there are any questions, call Alvarado at 909-591-8431 or 800-423-4143, Monday through Friday, 6:00 AM to 4:30PM PST.

Materials Enclosed:

For Vougue Style:

- 1. Turnstile Head
- 2. Post (outlets optional)
- 3. Yoke Post (outlets optional)

Tools Required:

For Vougue Style:


- Hammer Drill
- 5/8" Concrete Drill Bit
- Ratchet with a 9/16" Socket
- 3/16" Allen Wrench
- Chalk Line
- Rubber Mallet
- Slotted Head Screw Driver

Installation

1. Snap a shalk line on the floor in the desired locations(s) to determine the location of the posts and mark their center position (see Figure #1).

Allow a minimum of 29-14" from the center of the turnstile post to the center of the yoke post. Please be aware that if any more than 3" is left between the yoke post and the turnstile arm, unwanted passage may be obtainted

Figure #1

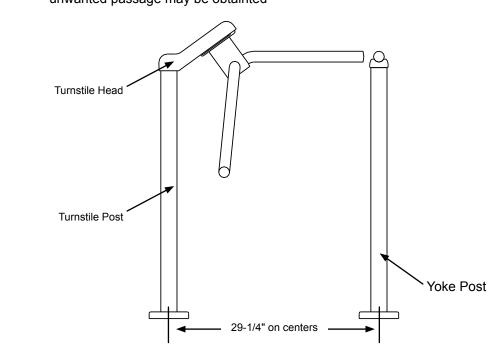


Anchor the posts per the vouge style or zenith style post installation instructions that are provided with this document. When using zenith style posts, completely tighten the outer four anchor bolts and ONLY SEAT the center anchor. Do not install the center anchor shaft at this time.

For Zenith Style add:

For Zenith Style add:

1. Anchor Package

- 1" Concrete Drill Bit
- 15/16" Socket

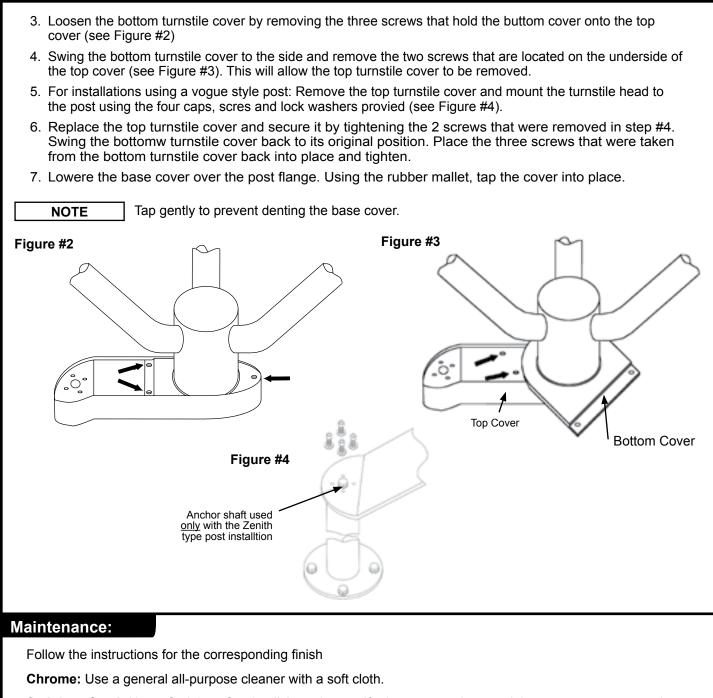

Stainless Steel: Use a Stainless Steel polish or cleaner. If a heavy scratch or mark is apparent, use a metal blend or finish pad for Satin Finishes.

Powder Coat: Use a soft damp cloth. Any deep scratches or chips should be touched up to prevent rust. (If left untreated, rust will spread under the surface of the material.)

Replace any sharp, bent, or broken pieces **IMMEDIATELY**. Tighten any loose pieces.

Tighten any loose pieces IIMMEDIATELY

Warranty:

6

Alvarado Manufacturing Company warrants the equipment being sold against defects in material and workmanship, for the period of one (1) year from the date of purchase, providing recommended installation and maintenance procedures are followed. This warranty is void if damage was due to improper installation, maintenance, or use. The manufacturer will not be responsible for any shipping or labor charges incurred in the removal or replacement of defective parts