Quick Queue Retractable Belt Wall Mount - Installation Instructions



Notice:

Installers and/or Store Personnel must provide this document to the manager or person responsible for the maintenance and use of the product. Read the Installation Instructions completely before installation of the product. If there are any questions, call Alvarado at (909) 591-8431 or toll free at (800) 423-4143, Monday through Friday, 6:00 AM to 4:30 PM PST.


Materials Enclosed:

- Belt Retractor
- 4. Wall Plug (x6)
- Wall Mount
- 5. Screw (x6)
- 3. Receiver Mount

Tools Required:

- Philips Screwdriver
- Hand Held Drill
- Pencil

Follow the Instructions to Assemble a Quick Queue Wall Mount:

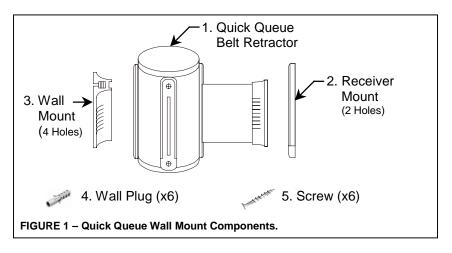


- 1. Mark the desired locations for drilling and drill as necessary to secure the Wall Plugs flush to the wall.
- 2. Secure the Wall Mount (with the Locking Tab on top) to a sturdy wall using the Wall Plugs (4) and Screws (4) provided.
- 3. Secure the Receiver Mount (with the grooves on top) to a sturdy wall using the Wall Plugs (2) and Screws (2) provided.
- 4. Secure the Belt Retractor to the Wall Mount by sliding the desired receiver up into the Wall Mount until the Locking Tab 'clicks' as shown in FIGURE 2A.
- Extend the belt and slide the belt end into the Receiver Mount fully as shown in FIGURE 2B.

Storing the Quick Queue Wall Mount Away:

When not in use, the Belt Retractor may be stored away.

- 1. Retract the belt by sliding the belt end upwards and walk the belt end completely back to the Belt Retractor.
- 2. Release the Locking Tab on the Wall Mount and slide the Belt Retractor down and away from the Wall Mount.

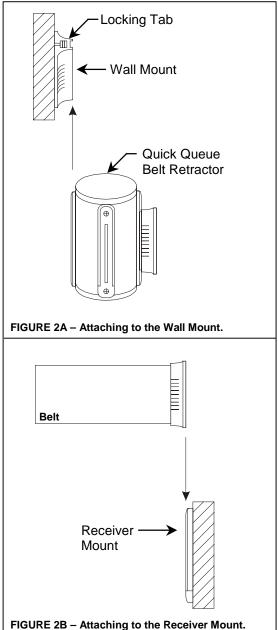



Maintenance:

Follow the instructions below for the corresponding finish:

Chrome

Use a general all-purpose cleaner with a soft cloth.

Stainless Steel:

Use a Stainless Steel polish or cleaner. If a heavy scratch or mark is apparent, use a metal blend or finish pad for Satin Finishes.

Powder Coat:

Use a soft damp cloth. Any deep scratches or chips should be touched up to prevent rust.

(If rust is untreated, rust will spread under the surface of the material.)

Replace any sharp, bent, or broken pieces IMMEDIATELY.

Tighten any loose pieces IMMEDIATELY.

Warranty:

Alvarado Manufacturing Company warrants the equipment being sold against defects in material and workmanship, for the period of one (1) year from the date of purchase, providing recommended installation and maintenance procedures are followed. This warranty is void if damage was due to improper installation, maintenance, or use. The manufacturer will not be responsible for any shipping or labor charges incurred in the removal or replacement of defective parts.