SW500
Pedestrian Gate

The SW500 is a stylish motorized gate that provides single direction access control, generally in retail environments.



COMMON APPLICATIONS

- Employee / Visitor Access Control
- Wheelchair / Disabled Access Control
- Bulky Item Delivery

TYPICAL INSTALLATION SITES

- Corporate Lobbies
- Health Clubs / Recreation Centers
- Entertainment Venues

FUNCTION

The SW500 provides single direction entry or exit control. In closed or home position, the barrier is held in place by motor force and an electromechanical locking device. As objects or persons move toward the gate in the activation direction, a motion sensor installed in the top of the gate post detects the movement and opens the gate inward (away from the activation detection direction). Once the gate opens, it remains in the open position for a defined opening dwell time then closes unless additional motion is detected. If additional motion is detected, the gate remains open or, if in the closing cycle, reopens.

The rear of the gate contains a "presence" sensor. This sensor detects the presence of an object in the gate opening path. If an object is detected, the gate will not open and an alarm will sound to notify personnel of the obstruction. Once the object or person is removed from the detection area, the gate will open normally. During the opening or closing cycle if the gate impacts an object, the gate will stop moving and an alarm will sound. After a defined period, the gate will reset for normal operation. The SW500 is microprocessor controlled. Programmable features are factory set at appropriate levels for most applications, but various features of the product are PC programmable (see Functionality – User Customizable Features, below). Push buttons or key switches to allow for activation by attendants or store personnel can be integrated to operate with the SW500.

An input is available for fire alarm systems. In the event that power to the unit is removed, the barrier can be manually moved to the open position with less than 2 lbs. of force.

The SW500 is available as a tandem gate set – the SW500T.

AVAILABLE CONFIGURATIONS

SW500

The SW500 consists of a single gate that has a minimum opening width of 36".

SW500T

The SW500T consists of two gates that operate in tandem. Posts are on either end with panels facing inward. The SW500T provides double the passage opening as a single SW500 gate.

AVAILABLE FINISHES

BRIGHT CHROME & POWDER COATED

The post is plated in a bright chrome finish. Powder coating and alternate plated finishes are available – see Options.

MATERIALS

POST

The gate post is fabricated from plated steel.

MOVING BARRIER

The barrier is fabricated from 1.5" O.D. (38 mm) plated steel tubing..

CONTROL, OPERATIONAL MODES & FUNCTIONALITY

CONTROL

The precise movement of the SW500's motorized barrier is controlled via a brushless DC motor working in conjunction with a position encoder and motor controller. Motor control software provides closed loop position control for precise movement and operational control.

Push buttons interface to the SW500 using voltage free dry contacts. An I/O board for connection is located inside the gate.

When the gate barrier is broken away, or an alarm condition is detected, a local audio alarm sounds. A secondary alarm output (in the form of a dry contact) is also available to provide a signal to remote devices notification such as a light or alarm.

PASSAGE MODES

Single Direction Controlled Passage	In this mode, the barrier is in the closed or home position. Upon receipt of an authorization signal from either an access system or dry contact emitting control device, the barrier moves away from the signal direction to the open position (approximately 90 degrees from home). The barrier remains open for a defined dwell time, then returns to the closed position. In this mode, the barrier opens in one direction only.

FUNCTIONALITY - USER CUSTOMIZABLE FEATURES

Prior to shipping, gates are configured with settings that are appropriate for most facilities. A summary of software configurable features is listed below:

BARRIER BREAKAWAY

The SW500 utilizes motor force and an electromechanical brake to provide resistance against a user pushing or pulling the barrier open from the exit direction. Resistance is adjustable but the holding force of the gate is not "absolute". The barrier can be forced open. When the barrier is forced, an alarm sounds, the barrier "breaks away" and can be moved manually. After a defined period, the gate will reset for normal operation.**BARRIER CYCLE AND DWELL TIME** This is an adjustable feature. Opening / closing speed and dwell time is factory set. Adjustments can be made within set limits appropriate for the installation application.

BARRIER CYCLE TIME

This is an adjustable feature. Opening and closing speed is factory set. Adjustments can be made to barrier opening/ closing time appropriate for the installation application.

BARRIER IMPACT

Should the barrier encounter an obstruction while opening or closing, the barrier will stop moving and an alarm will sound. After a defined period, the barrier resets and the gate resumes normal operation.

EMERGENCY OVERRIDE / FIRE ALARM

Activation to open the barriers in conjunction with a fire alarm system is achieved by supplying a sustained dry contact to the appropriate input point..

POWER FAILURE

WWhen power is removed from the unit, the barrier of the SW500 can be freely moved in either direction. When pushed or pulled open in either direction, the barrier remains open. When power is restored, the gate resumes normal operation.

INTERFACE TO PUSH BUTTONS

The SW500 is activated (opened) by supplying an isolated, voltage free, momentary dry contact at the appropriate location on the product I/O control board. An “open” input is available in each direction of operation. The gate can be opened indefinitely by supplying a sustained dry contact input. This can be used for “cleaning mode.” There is no space to attach push buttons directly to the gate.

INTERFACE TO FIRE SYSTEMS

The SW500 is activated (opened) by supplying an isolated, voltage free, sustained dry contact at the appropriate location on the product I/O control board. The barrier opens in the exit direction and remains open until the signal is removed.

OPTIONS

ALTERNATE FINISHES

The post can be plated with an alternate plated finish such as brass or satin chrome. Powder coating in one of Alvarado’s many colors is also available.

ALTERNATE POWER SUPPLY

A 220-240VAC, 50 Hz power supply and appropriately rated key switch are utilized.

RAILING INTEGRATION

Alvarado post and railing can be integrated with the SW500. Contact Alvarado for layout assistance.

SOLID CLEAR ACRYLIC BARRIER

AA solid acrylic panel replaces the metal barrier. The barrier is fabricated from 0.5" (13mm) thick acrylic with abrasion resistant coating. Two barrier heights are available:

The barrier is approximately 6" from the floor (bottom) and 38" from the floor (top). The barrier creates a minimum 36" passage opening.

Panels can be etched with corporate logos. Contact Alvarado for artwork requirements.

Panels are also available as an option on the SW500T.

USAGE CONSIDERATIONS

Please contact Alvarado with questions regarding SW500 usage considerations.

Straight on Entry	Gates open when the motion detector detects motion toward the gate. The detection setting is adjustable, but it is desirable to funnel patrons so that they enter the gate head on, not parallel to the gate. Railing or merchandise can be used for this purpose.
Spacing; Gate Swing Area	Visual displays and merchandise should not be placed so that customers are drawn into the gate swing area.
Inspection	Gate operation should be inspected by store personnel daily. Inspection procedures are provided with the product operation manual.

CONDUIT REQUIREMENTS

SW500

Primary (AC)	.5" conduit for primary power is run up and into the Post. 110-120VAC is standard.
Activation	.5" conduit for activation signal(s) and fire alarm input. Also used for outputs, if applicable.


SW500T

Primary (AC)	.5" conduit for primary power is run up and into the Master Gate.
Low Voltage (DC)	.5" conduit for DC power is run from the Master Gate to the Slave Gate.
Master / Slave	.5" conduit that tee's off the Activation Signal Conduit at the Master Gate. This conduit is used to run communication signal wire between the Master Gate and Slave Gate. The communication signal wire synchronizes barrier opening and closing between the Master and Slave Gate.

SW1000 CONDUIT



SW1000T CONDUIT

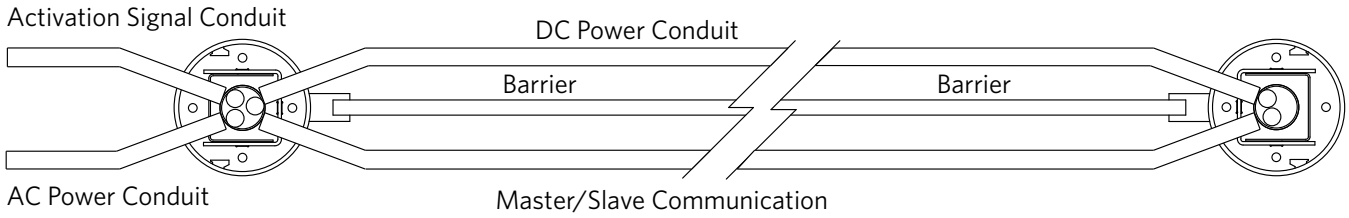

SHIPPING AND SITE PREPARATION

SHIPPING


The SW1000 is shipped with mounting hardware and assembly and operational instructions.


SITE PREPARATION

The SW1000 must be installed on a firm foundation in a manner that allows the required power and signal cabling to be pulled into the cylindrical tower. The slab platform should be a minimum of 4″ deep, level concrete. Installation should be performed by a skilled installer following Alvarado's instructions. Drawings and installation manuals are available online.

TECHNICAL DIMENSIONS

Dimensions are shown in inches (mm). All measurements are approximate.

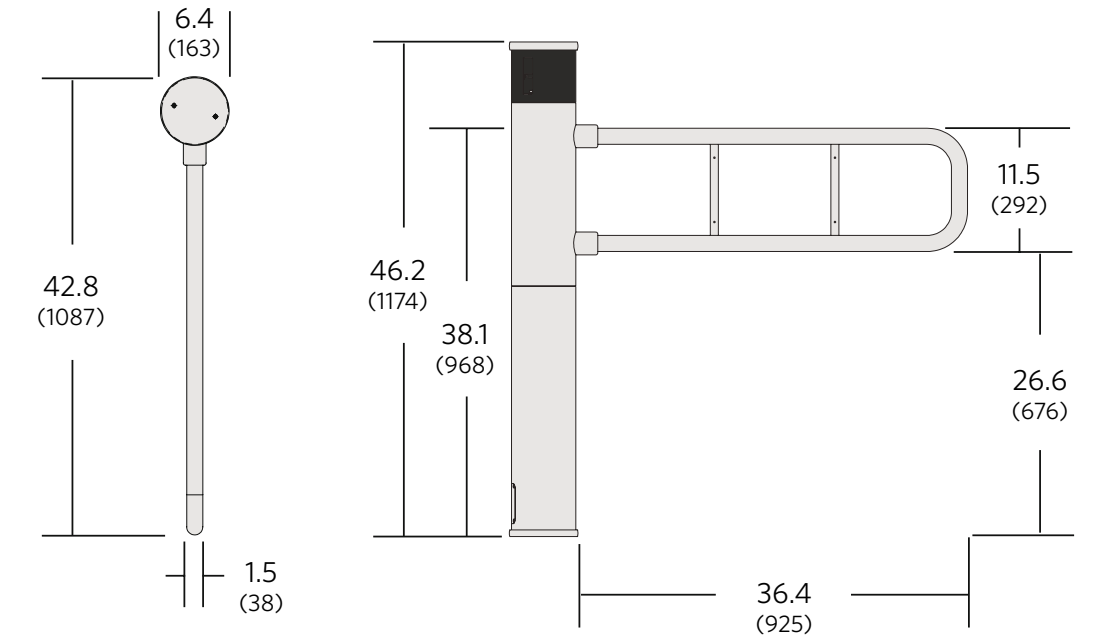

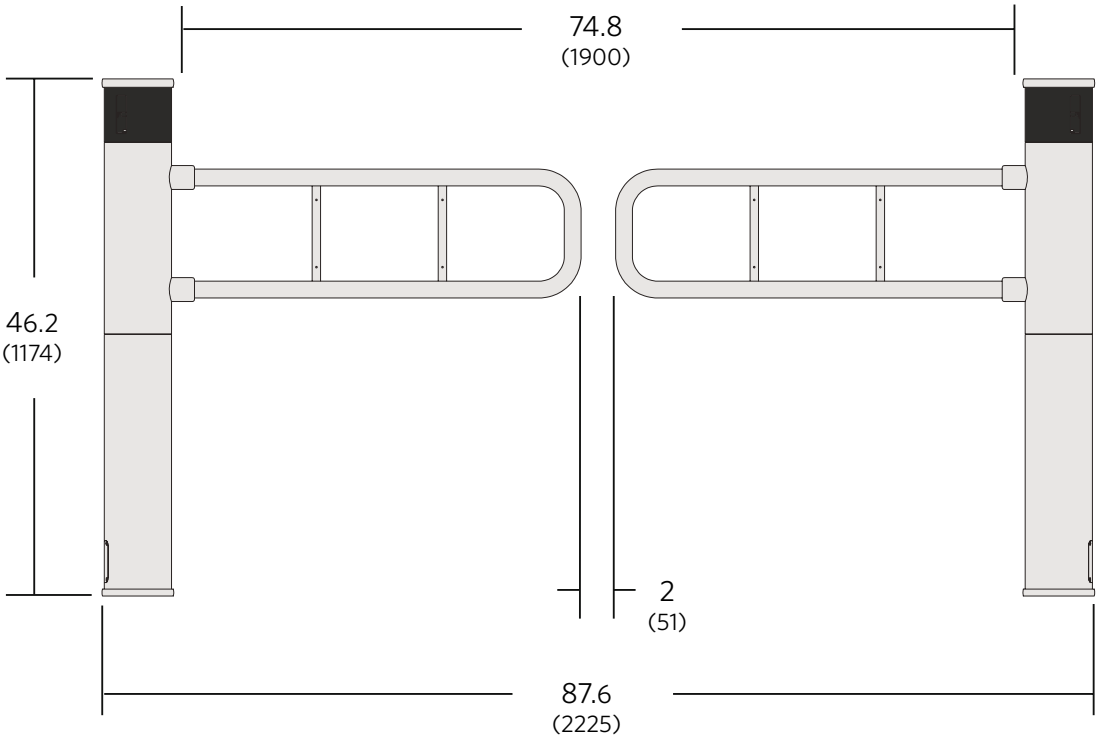

Electrical	Description	
Power Supply	100-240 VAC, 6.0 A, 50/60 Hz	
Operational Voltage	Primary power is stepped down and rectified for low voltage 24VDC, 12VDC, and 5VDC operation.	
On/Off Key Switch	An on/off key switch is located on each gate.	
Fuse Protection	A 2.5 amp fuse (slo-blo) is installed in each gate.	
Surge Protection	Alvarado suggests use of surge protection equipment in connection with the installation to protect electronics	
Drive Motor	24V BLDC	
Weights and Environmental		
	Standard	**Metric**
Product Weight	100 lbs.	45 kg Weight for a standard gate
Shipping Weight	185 lbs.	84 kg Includes weight of shipping crate(s)
Operating Temperature	14° to 140° F	-10° to 60° C
Storage Temperature	14° to 140° F	-10° to 60° C
Relative Humidity	20-90% (non-condensing)	--

WARRANTY

For a period of one year from the date of shipping, Alvarado will replace or repair, at Alvarado's option, any products or parts which are defective in materials or workmanship, provided recommended installation and maintenance procedures are followed. This warranty is void if damage is due to improper installation, maintenance or use. This warranty is limited to parts only, and does not cover labor or shipping charges incurred in connection with the removal or replacement of warranted products or parts.

This warranty is expressly made in lieu of any and all other warranties, expressed or implied, including, but not limited to implied warranties of merchantability and fitness for a particular purpose. Alvarado shall not be liable for any loss or damage, directly or indirectly, arising from the use of purchased products. In no event shall Alvarado be liable to buyer for consequential damages, special damages, incidental damages, loss of use, business interruption, loss of profits, or damages of any kind arising out of the use or inability to use a purchased product. In NO event shall Alvarado be liable for damages which exceed the purchase price of a covered product.